


Autodesk Moldflow Communicator 2012 インストールガイド

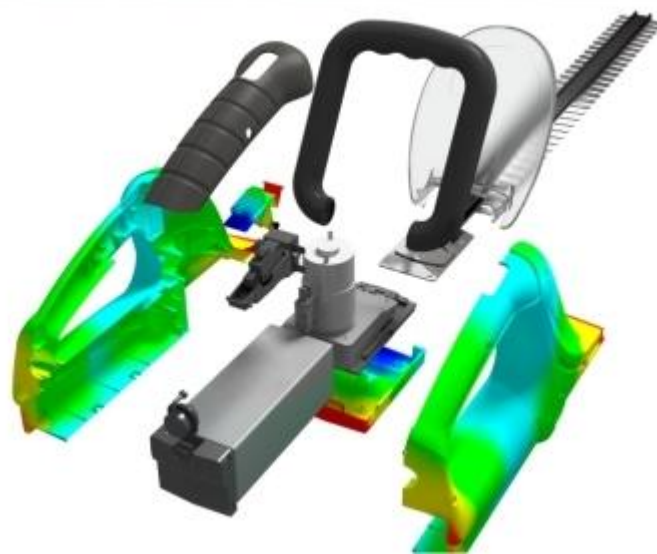

■Moldflow Communicator システム要件

以下のシステムにおいて使用することが可能です。

- Autodesk Moldflow Insight 2010 以降
- Autodesk Moldflow Adviser 2010 以降
- Moldflow Plastics Insight Ver6.1 以降
- Moldflow Plastics Advisers Ver8.1Rev.3 以降

- Windows 7 (32 ビット版) 日本語版
Professional、Ultimate、(Enterprise)
- Windows 7 (64 ビット版) 日本語版
Professional、Ultimate、(Enterprise)
- Windows Vista (32 ビット版) SP2 日本後版
Business、Ultimate、(Enterprise)
- Windows Vista (64 ビット版) SP2 日本後版
Business、Ultimate、(Enterprise)
- Windows XP Professional (32 ビット版) SP3 日本語版
- Windows XP Professional (64 ビット版) SP2 日本語版

1. Autodesk Moldflow Communicator 2012 日本語版のダウンロード

注) インストールする前に、必ず **Administrator** 権限を持つユーザーでログインしてください。

①以下のサイトにアクセスします。

<http://www.autodesk.com/moldflowcommunicator>


②すべて記入、選択が完了しましたら右下の「Submit」をクリックします。

(記入例)

③画面が切り替わりますので

「Download Autodesk Moldflow Communicator」および

「Japanese Language Pack」をダウンロードします。

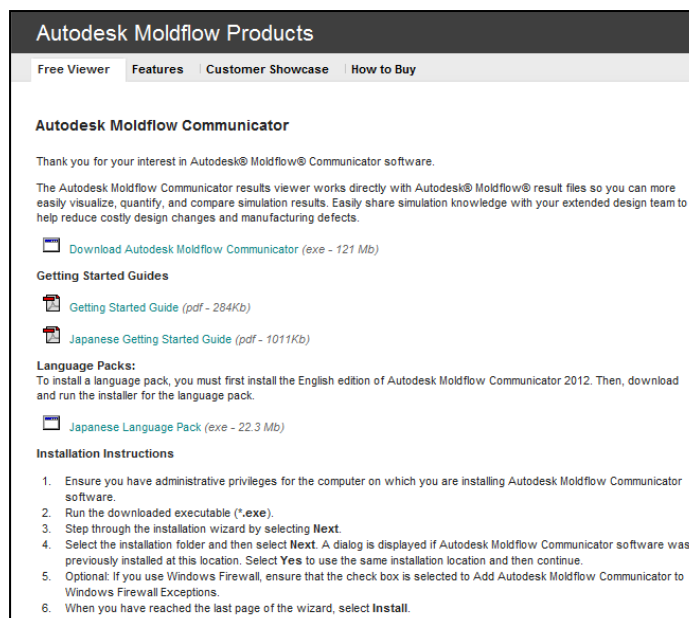

The screenshot shows the Autodesk Moldflow Products website. The main heading is "Autodesk Moldflow Communicator". Below this, there is a "Getting Started Guides" section with two links: "Getting Started Guide (pdf - 284Kb)" and "Japanese Getting Started Guide (pdf - 1011Kb)". There is also a "Language Packs" section with a link for "Japanese Language Pack (exe - 22.3 Mb)". At the bottom, there are "Installation Instructions" listed as a numbered list.


Autodesk Moldflow Products

Free Viewer | **Features** | Customer Showcase | How to Buy


Autodesk Moldflow Communicator


Thank you for your interest in Autodesk® Moldflow® Communicator software.

The Autodesk Moldflow Communicator results viewer works directly with Autodesk® Moldflow® result files so you can more easily visualize, quantify, and compare simulation results. Easily share simulation knowledge with your extended design team to help reduce costly design changes and manufacturing defects.

 [Download Autodesk Moldflow Communicator \(exe - 121 Mb\)](#)


Getting Started Guides

 [Getting Started Guide \(pdf - 284Kb\)](#)

 [Japanese Getting Started Guide \(pdf - 1011Kb\)](#)

Language Packs:

To install a language pack, you must first install the English edition of Autodesk Moldflow Communicator 2012. Then, download and run the installer for the language pack.

 [Japanese Language Pack \(exe - 22.3 Mb\)](#)

Installation Instructions

1. Ensure you have administrative privileges for the computer on which you are installing Autodesk Moldflow Communicator software.
2. Run the downloaded executable (*.exe).
3. Step through the installation wizard by selecting **Next**.
4. Select the installation folder and then select **Next**. A dialog is displayed if Autodesk Moldflow Communicator software was previously installed at this location. Select **Yes** to use the same installation location and then continue.
5. Optional: If you use Windows Firewall, ensure that the check box is selected to Add Autodesk Moldflow Communicator to Windows Firewall Exceptions.
6. When you have reached the last page of the wizard, select **Install**.


※操作ガイド：「Japanese Getting Started Guide」もダウンロードしてください。

2. Autodesk Moldflow Communicator のインストール

- ①ダウンロードした autodesk_moldflow_communicator_2012.exe を実行します。
「Next」をクリックします。




- ②Country or Region を「Japan」に切り替え、内容を確認後
「I accept the agreement」を選択し、「Next」をクリックします。

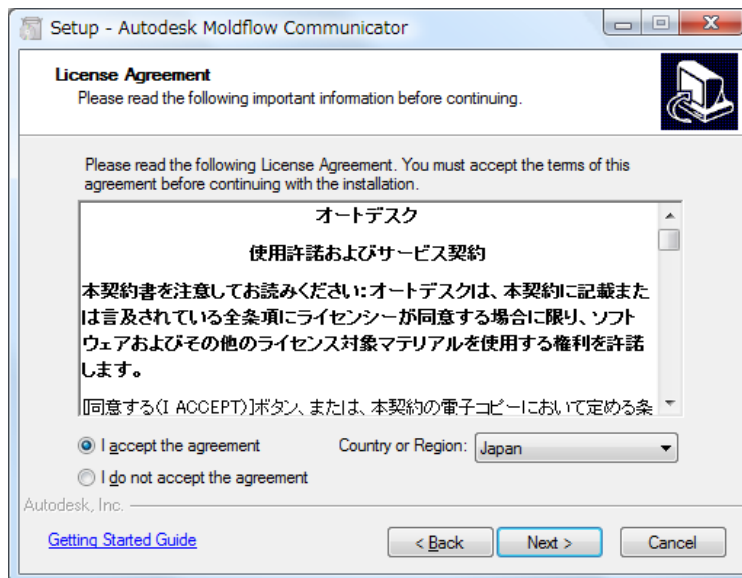

③Autodesk Moldflow 2012 で採用されているリボン UI をご利用になる場合は「Ribbon UI」を選択します。

旧バージョンのインターフェース（プルダウンメニューなど）をご利用になる場合は「Classic UI」を選択します。

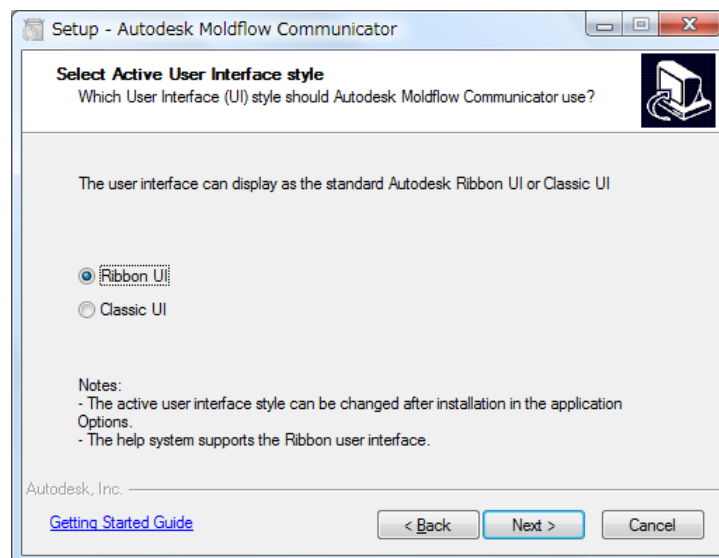


「Next」をクリックします。

④3D Connexion のデバイスを聞かれる場合は「Next」をクリックしてください。


⑤インストール先を設定します。

変更する場合は「Browse」をクリックして指定してください。

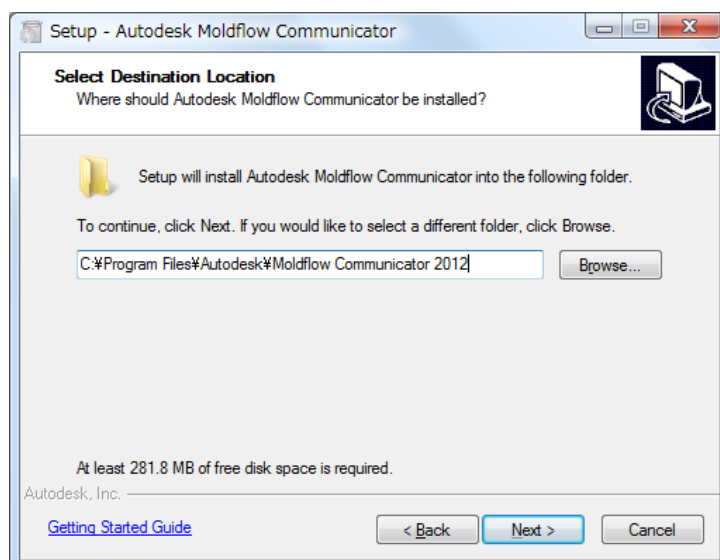

「Next」をクリックします。

⑥ 「Install」 をクリックすると、インストールが開始されます。

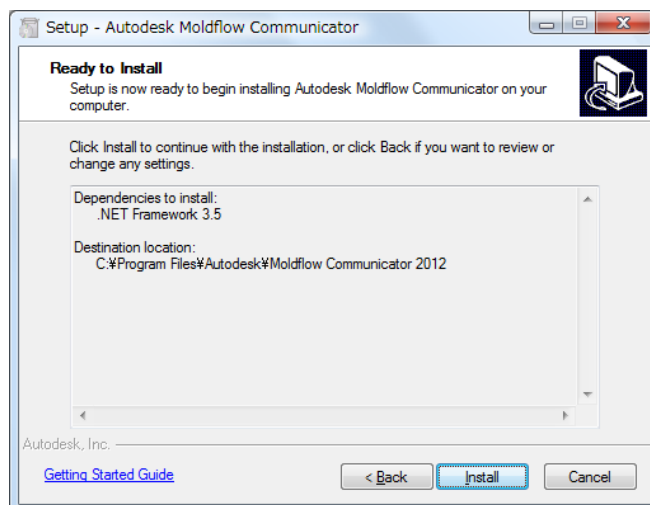


⑥画面のチェックを外してください。「Finish」 をクリックします。




3. 日本語パッチのインストール

①ダウンロードした `autodesk_moldflow_communicator_2012_ja.exe` を実行します。

「OK」 をクリックします。

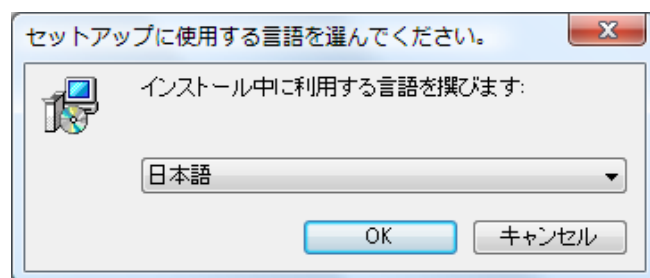

② 「次へ」をクリックします。

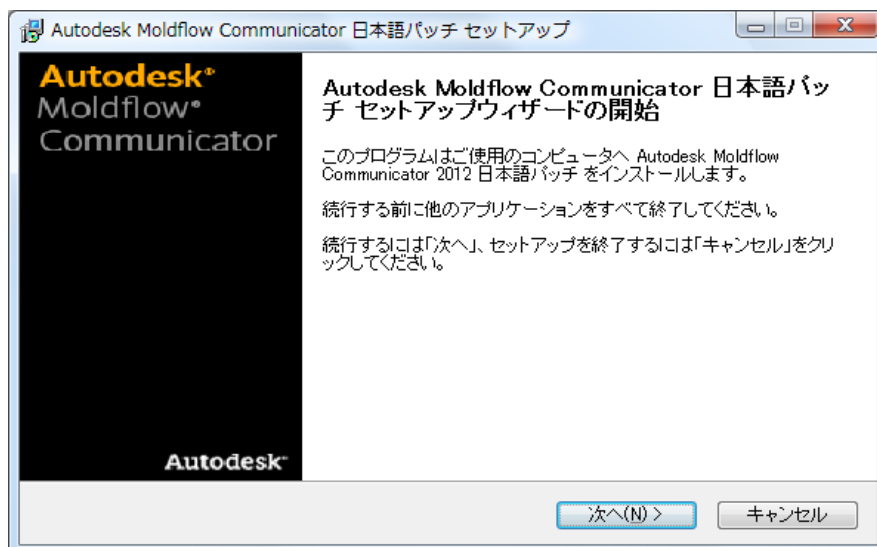

③ 「インストール」をクリックすると、インストールが開始されます。




④ 「完了」を押して終了します。

インストールは完了しました。

4. Autodesk Moldflow Communicator 起動と設定

①Autodesk Moldflow Communicator 2012 を起動します。

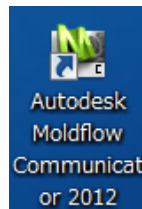


②環境のインポート

※旧バージョンがインストールされていた場合は、過去の環境を 2012 にコピーするか聞いてきます。その場合は「はい」を選択してください。

※場合によっては CIP への協力のダイアログボックスが開きます。

各自の判断で、次へ進んでください。

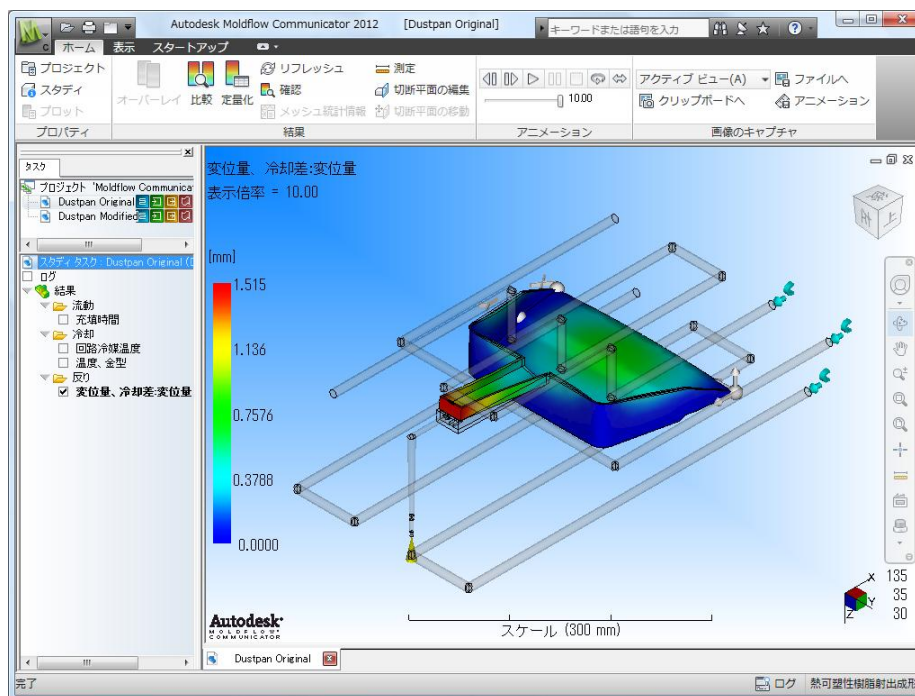

Autodesk Moldflow Communicator 2012 <installation guide> 2011 年



〒164-0012 東京都中野区本町 4-38-13

FAX : 03-5342-1055

無断転載禁止